
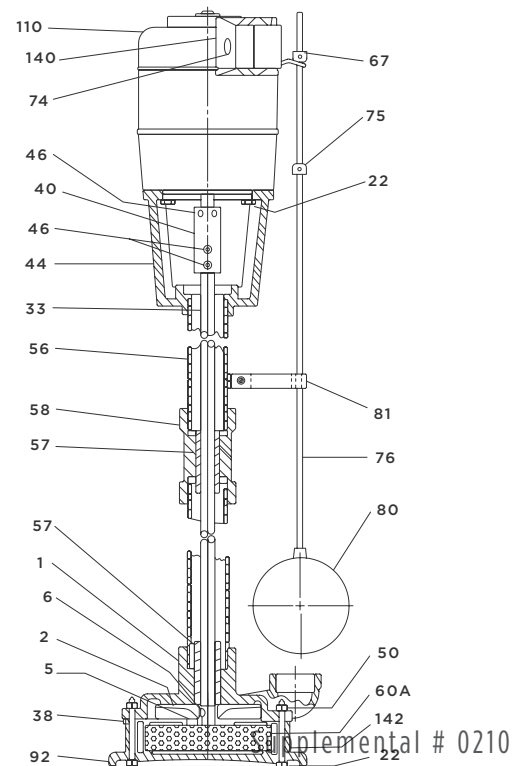


Parts List & Diagram

PARTS LIST					
NO.	NAME	REQ.	BRONZE FITTED	ALL IRON	ALL BRONZE
1	PUMP CASING	1	CAST IRON	CAST IRON	BRONZE
2	IMPELLER	1*	BRONZE	CAST IRON	BRONZE
5	IMPELLER NUT	1*	BRASS	STEEL	BRASS
6	IMPELLER KEY	1*	STEEL	STEEL	BRASS
22	UPPER DISC. FLANGE CAP SCREW	2	STEEL	STEEL	STEEL
22	CASING CAP SCREW	4	STEEL	STEEL	BRASS
22	MOTOR CAP SCREW	4	STEEL	STEEL	STEEL
22	PEDESTAL CAP SCREW	2	STEEL	STEEL	BRASS
33	SHAFT	1*	ST. ST.	ST. ST.	ST. ST.
38	SUCTION PLATE	1	BRASS	STEEL	BRASS
40	COUPLING	1	STEEL	STEEL	STEEL
44	PEDESTAL	1	CAST IRON	CAST IRON	CAST IRON
46	COUPLING SET SCREW	4*	STEEL	STEEL	STEEL
46	UPPER DISC. FLANGE SET SCREW	1*	STEEL	STEEL	STEEL
50	CASING NUTS	4	STEEL	STEEL	BRASS
53	SUPPORT COVER	1	CAST IRON	CAST IRON	CAST IRON
56	SUPPORT LEG	1	STEEL	STEEL	BRASS
57	INTERMEDIATE BEARING	1*	BRONZE	CAST IRON	BRONZE
57	PUMP BEARING	1*	BRONZE	CAST IRON	BRONZE
58	INTERMEDIATE HOUSING	1	CAST IRON	CAST IRON	BRONZE
60	SUCTION STRAINER	1	CAST IRON	CAST IRON	BRONZE
60A	SUCTION STRAINER	1	BRASS	STEEL	BRASS
63	DISCHARGE PIPE	1	STEEL	STEEL	BRASS
67	STOP SET SCREW	2*	ST. ST.	ST. ST.	ST. ST.
68	UPPER DISC. FLANGE	1	CAST IRON	CAST IRON	CAST IRON
69	UPPER DISC. FLANGE WASHER	2	STEEL	STEEL	STEEL
74	FLOAT SWITCH	1*	VARIOUS	VARIOUS	VARIOUS
75	FLOAT STOP	2*	BRASS	STEEL	BRASS
76	FLOAT ROD	1*	BRASS	ST. ST.	BRASS
80	FLOAT	1*	COPPER	ST. ST.	COPPER
81	FLOAT ROD GUIDE	1	BRASS	STEEL	BRASS
92	BASE STAND	1	CAST IRON	CAST IRON	BRONZE
110	MOTOR	1	VARIOUS	VARIOUS	VARIOUS
140	FLOAT SWITCH BRACKET	1	ALUMINUM	ALUMINUM	ALUMINUM
142	STRAINER SPACER	4	BRASS	STEEL	BRASS


* Recommended spare parts to be carried in stock.

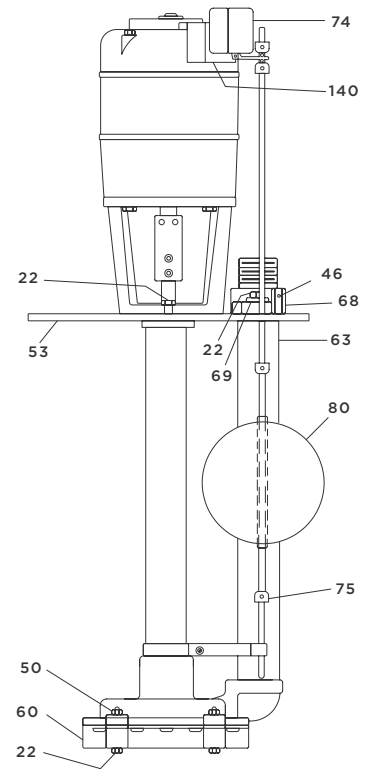

PARTS LIST

NO.	NAME	REQ.	BRONZE FITTED	ALL IRON	ALL BRONZE
1	PUMP CASING	1	CAST IRON	CAST IRON	BRONZE
2	IMPELLER	1*	BRONZE	CAST IRON	BRONZE
5	IMPELLER NUT	1*	BRASS	STEEL	BRASS
6	IMPELLER KEY	1*	STEEL	STEEL	BRASS
22	CAP SCREW	-	STEEL	STEEL	STEEL
32	THRUST BALL BEARING	1*	STEEL	STEEL	STEEL
33	SHAFT	1*	ST. ST.	ST. ST.	ST. ST.
34	MOTOR SHAFT KEY	1*	STEEL	STEEL	STEEL
34	PUMP SHAFT KEY	1*	STEEL	STEEL	STEEL
38	SUCTION PLATE	1	BRASS	STEEL	BRASS
41	COUPLING SET	1	VARIOUS	VARIOUS	VARIOUS
44	PEDESTAL	1	CAST IRON	CAST IRON	CAST IRON
45	ADJUSTING NUT	2*	BRASS	BRASS	BRASS
46	UPPER DISC. FLANGE SET SCREW	1*	STEEL	STEEL	STEEL
46	BEARING CAP SET SCREW	1*	STEEL	STEEL	STEEL
47	BEARING CAP	1*	CAST IRON	CAST IRON	CAST IRON
50	NUT	-	STEEL	STEEL	BRASS
53	SUPPORT COVER	1	CAST IRON	CAST IRON	CAST IRON
56	SUPPORT LEG	1	STEEL	STEEL	BRASS
57	INTERMEDIATE BEARING	1*	BRONZE	CAST IRON	BRONZE
57	PUMP BEARING	1*	BRONZE	CAST IRON	BRONZE
58	INTERMEDIATE HOUSING	1	CAST IRON	CAST IRON	BRONZE
60	SUCTION STRAINER	1	CAST IRON	CAST IRON	BRONZE
	SUCTION STRAINER	1	BRASS	STEEL	BRASS
63	DISCHARGE PIPE	1	STEEL	STEEL	BRASS
67	STOP SET SCREWS	2*	ST. ST.	ST. ST.	ST. ST.
68	UPPER DISC. FLANGE	1	CAST IRON	CAST IRON	CAST IRON
69	WASHER	-	STEEL	STEEL	STEEL
74	FLOAT SWITCH	1*	VARIOUS	VARIOUS	VARIOUS
75	FLOAT STOP	2*	BRASS	STEEL	BRASS
76	FLOAT ROD	1*	BRASS	ST. ST.	BRASS
80	FLOAT	1*	COPPER	ST. ST.	COPPER
81	FLOAT ROD GUIDE	1	BRASS	STEEL	BRASS
92	BASE STAND	1	CAST IRON	CAST IRON	BRONZE
110	MOTOR	1	VARIOUS	VARIOUS	VARIOUS
140	FLOAT SWITCH BRACKET	1	ALUMINUM	ALUMINUM	ALUMINUM
142	STRAINER SPACER	4	BRASS	STEEL	BRASS

* Recommended spare parts to be carried in stock.

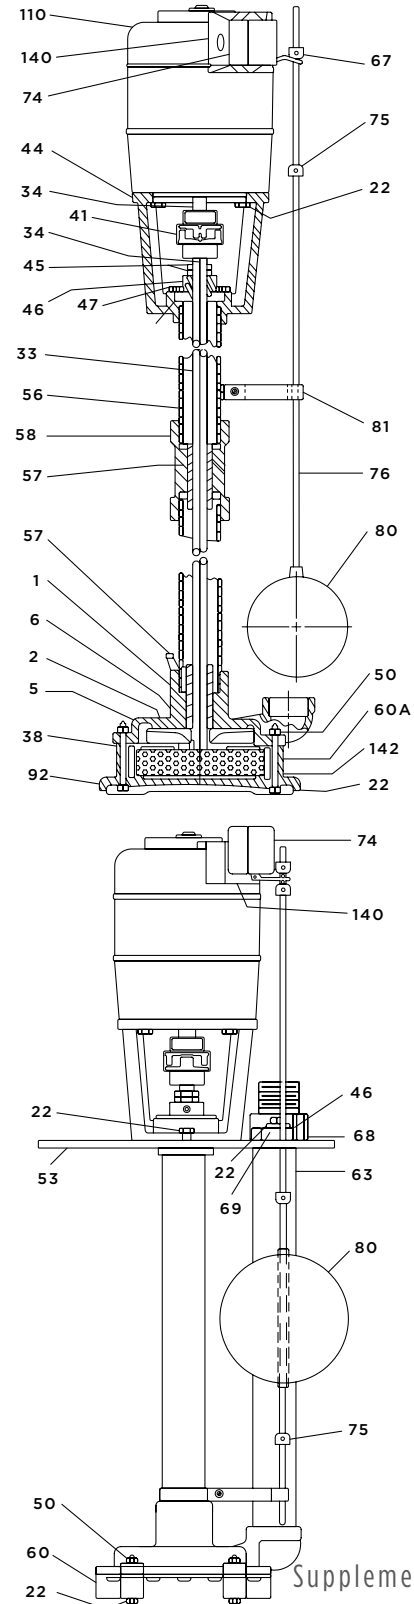Parts List & Diagram


Supplemental # 0210

